
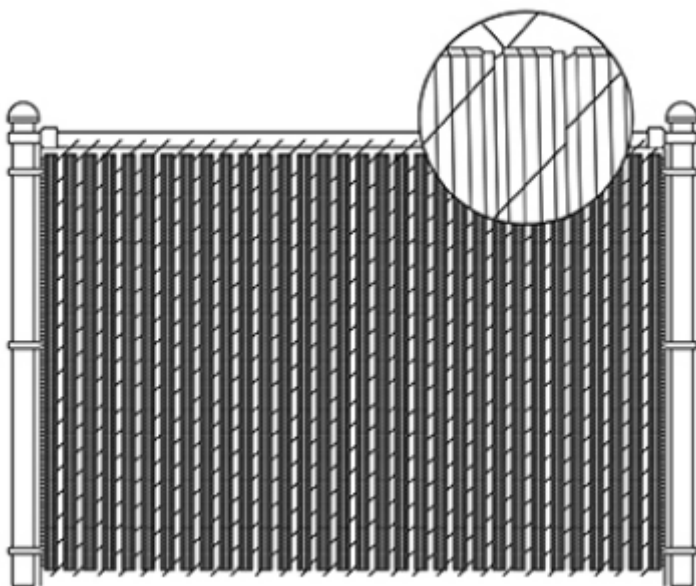


Fin2000 Installation Instructions

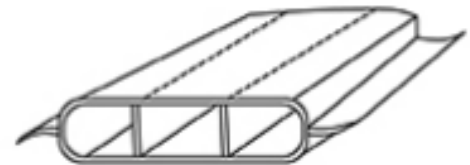

Insert the fence slats vertically into the fence from top to bottom.

No tools are necessary.

The wings grip the knuckles of the wire mesh, securing the slat in place.