
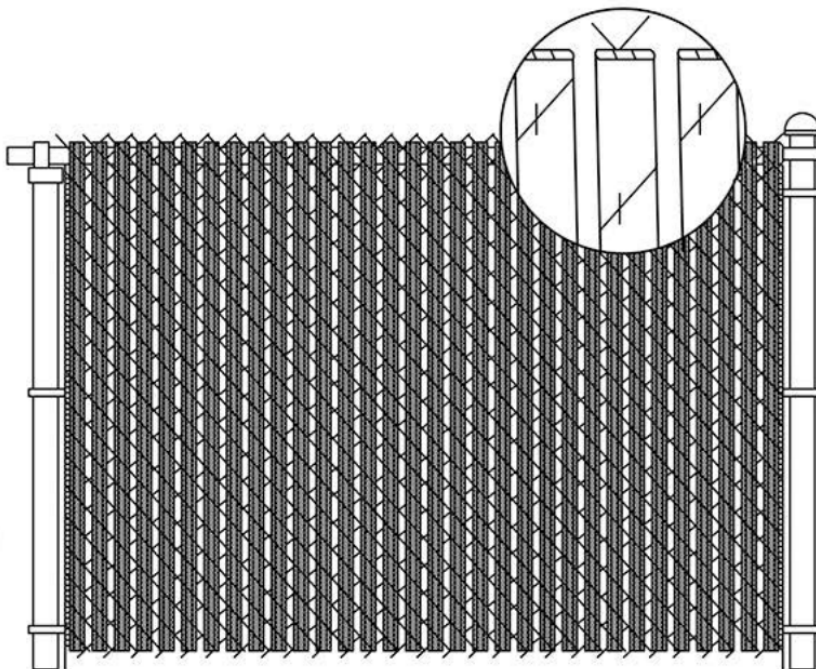
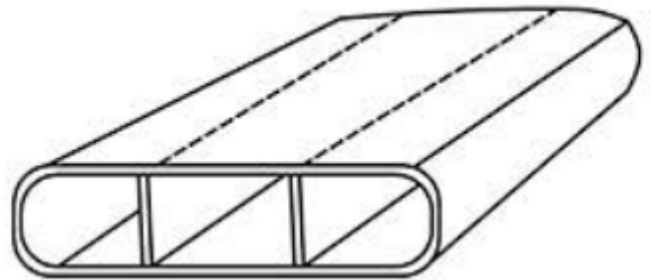


Industrial Slat Installation Instructions

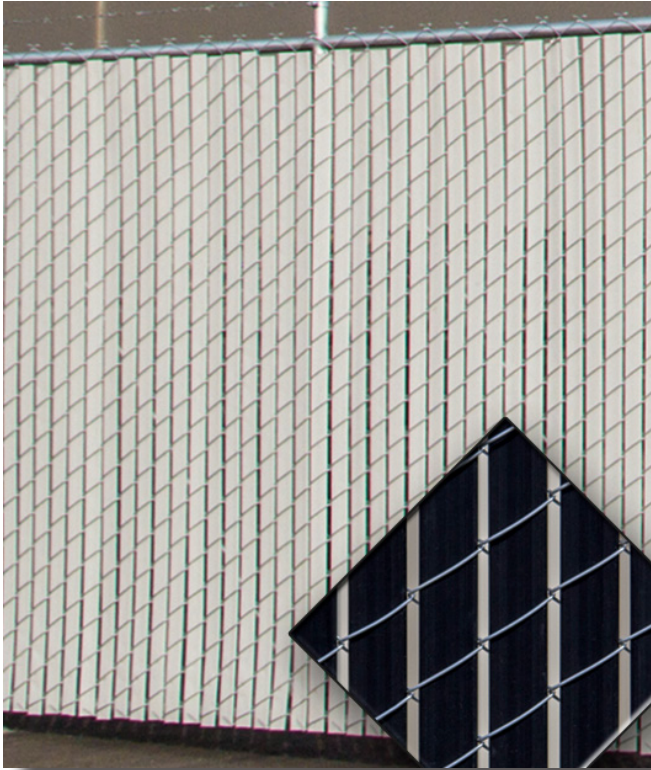

Insert the bottom channel (must be purchased separately) horizontally through the bottom of the fence.

Slide the fence slats vertically from the top of the fence into the bottom channel and the slat will be secured into place.

The slats may also be secured by manually stapling or hog-ringing them into place.