




Bottom Locking Privacy Slat Installation Guide

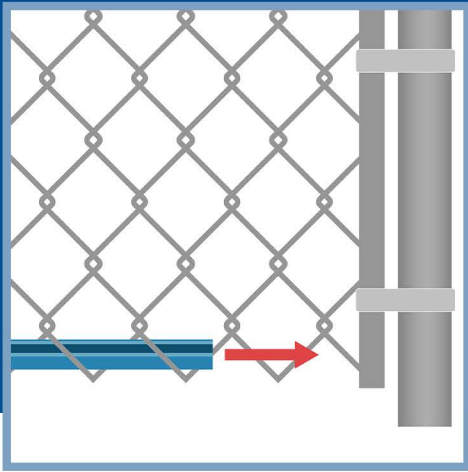


Insert the bottom locking channel horizontally into the bottom row of links on the chain link fence. Be sure the open side of the channel is facing up.

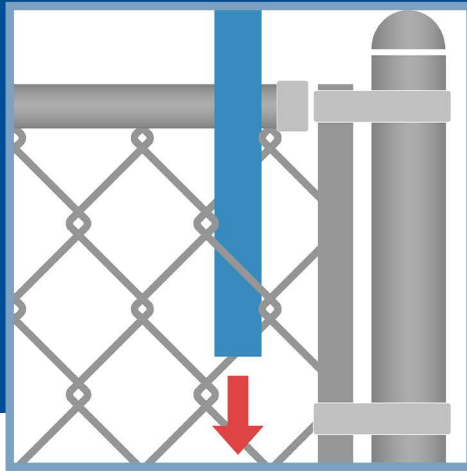

At the top, insert the privacy slats vertically through the chain link fence. Be sure the beveled/notched edge is facing down towards the horizontal channel.

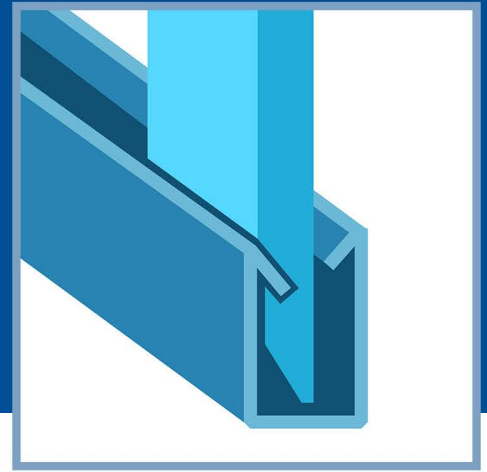

Once the vertical privacy slats have reached the bottom of the fence, push the vertical slat into the horizontal channel until it locks into place.

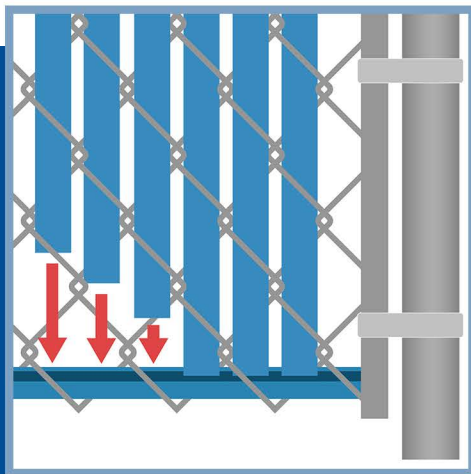

Continue inserting the rest of the vertical privacy slats individually until the desired section is fully covered. The slats should appear even once they are securely locked in place. Enjoy your privacy fence!

[Shop Bottom Locking Slats](#)

Installation Examples

